


# TILE Bluetooth Speaker

## Instruction Sheet

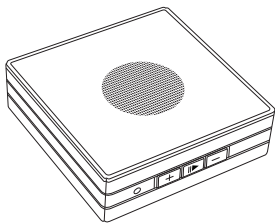

by pneuSOUND



## Specifications

Speaker:	D32mm (120HZ-20KHZ)
Power output:	2W 4Ω
SNR:	≥92 ± 2dB
Bluetooth version:	3.0
Bluetooth effective range:	up to 30 ft
Polymer battery:	2000mAh
Playing time:	6-8hours
Charging voltage:	5V DC
Product size:	77mmx77mmx22mm(LxWxH)

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by My Music Group Limited is under license. Other trademarks and trade names are those of their respective owners.

Manufacturer: My Music Group  
Bluetooth Listing ID: D023831  
Item Number: #2127 TILE

## ■ What's in the Box?

- 1x Bluetooth Speaker
- 1x USB Cable for Charging
- 1x Line in Cable
- 1x User Operating Manual

## ■ Bluetooth Speaker Operation

**Note: The Bluetooth Speaker Name is TILE, Pairing Code is: 0000**

- Powering on the Speaker:
    - Press and hold the "▶" button.
    - When the prompt tone sounds and the blue LED indicator flashes, the speaker has turned on.
  - Pairing a Device to the Bluetooth Speaker:
    - On the device to be paired (phone, tablet, etc.), select Bluetooth device "TILE".
    - If prompted for a password, enter the pairing code "0000", and press "Yes" to connect your device. Note that some devices can be connected directly without entering a pairing code.
  - To increase or decrease volume, press and hold the "+/-" buttons.
  - To skip or go back in tracks, press and release the "+/-" buttons.
  - To play or pause, press the "▶" button.
- 
- Bluetooth Reconnection
    - When the device and Bluetooth speaker are separated beyond the effective range (≥30 ft.), the Bluetooth communication will be disconnected.
    - Return the device to the effective range (≥30 ft.) to reconnect with the Bluetooth speaker.
  - To power off the speaker, press and hold the "▶" button.

## ■ Line-in Function:

- Connect the Bluetooth speaker to any device with a 3.5mm interface to play music.
- The LED light on the speaker will become red.
- Note that the Play/Pause/Previous/Next functions via the "+/-" buttons on the speaker only work when the speaker is connected wirelessly via Bluetooth.

## ■ Charging the Battery

- Plug the provided USB charging cable into the speaker and connect to an active computer USB port, USB AC adapter, USB car charger or portable charger.
- Typical charging time: 2-3 hours.